

Playaway View Policy

1 week borrowing period.

3 Playaway Views per library card.

Replacement cost if lost or damaged:

\$99 for view unit,

\$15 for replacement power cord.

Do not return in book drop.

\$1.00 fine for Playaway Views returned in book drop.

CHARGE UNIT BEFORE RETURNING TO LIBRARY.

Playaway View is a portable all-in-one video player that comes with the video content already pre-loaded on it. It weighs 5.4 ounces and has a 3.5" full color LCD screen with a shatter-resistant acrylic screen cover. The built-in speaker makes sharing up to six hours of content easy, while the headphone jack outlet offers a parent-friendly quiet option.



Check out the new View.



Playaway View Mercer County Library System

Mercer County Library System



Brian M. Hughes, County Executive

Using Playaway View

Basic directions and a diagram of the buttons are included in the Playaway case.

How long should it take for Playaway View to turn on and off?

After pressing the power button, it could take up to 20 seconds for Playaway View to load and display the menu screen.

The exception is when Playaway View is in standby mode, which allows you to instantly turn on the player by pressing the Power button. Standby mode is initialized every time you turn off the player (or after 2 minutes of non-use when paused or on the menu screen) and will last for 24 hours. After 24 hours, the player will fully power itself down to preserve battery life.

To turn the player off, press and hold the Power button for three seconds until the screen goes dark.

Is there a quick way to reset Playaway View to the beginning?

Press the Forward and Reverse buttons simultaneously while on the menu screen until the unit powers off (approximately 5 seconds). Press Power and Play to start at the beginning.

How do I know how much battery life is left on Playaway View?

A battery level icon will be visible on the menu screen. When approximately 10% of battery life remains, a low battery icon will begin flashing on the screen during play mode. When the player requires a charge, a low battery symbol will display on the entire screen and shutdown.

How do I charge Playaway View?

Please use the AC Adaptor included with the player or another charger with a mini USB connection. This includes standard AC adaptors that are plugged into electrical outlets or travel chargers.

How long does it take to achieve a full charge if the battery is drained?

It should take approximately 4 hours to achieve a full battery charge. When the player is actively charging, a charging symbol will appear in the middle of a green battery icon. When the player is fully charged, the charging symbol will disappear from the battery icon.

Can I watch Playaway View while it's charging? Yes.

Can I lock Playaway View's buttons so my child can't alter the volume or play mode once it's playing?

By pressing the following button at the same time, Playaway View can easily be locked/unlocked.



Press Home + Volume Down:

Tips & Tricks

Why won't Playaway View turn on?

If the Power does not turn on, you may need to charge the player. Simply use the AC Adaptor included with the player or another charger with a mini USB connection. You may also want to try rebooting the player.

How do I reboot Playaway View?

Insert the end of a paper clip into the hole at the bottom of the player to reboot. Be sure not to use excessive force; instead, push only until a small 'click' is felt. Press Power to turn the player back on.

How can Playaway View be cleaned?

A microfiber cloth is recommended for cleaning fingerprints. If desired, you may also use a small, damp sanitizing wipe to clean the body and screen of Playaway View.

<http://my.playaway.com/playaway-view/>